


FLY DECK

ASSEMBLY INSTRUCTIONS



FLY DECK - ASSMBLY INSTRUCTIONS

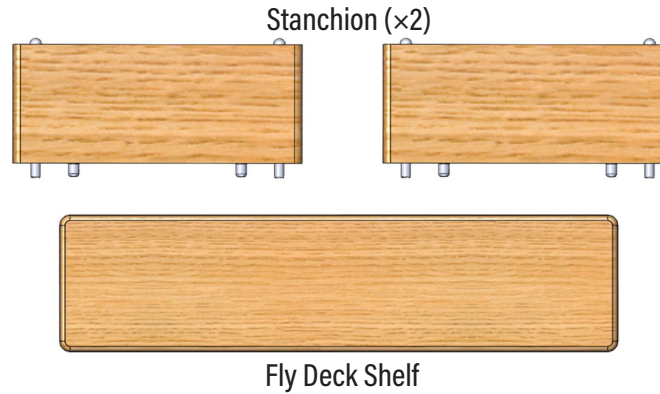


1. Attach One Stanchion

Step 1 - Align the Dowel Pins and Cam Posts of one Stanchion with the holes in the bottom of the Shelf. Press the Stanchion down until it is flush with the shelf.

Note - Be sure to orient the black side of the stanchion towards the back of the shelf.

Step2 - Rotate both Cam Disks using a screwdriver until tight.

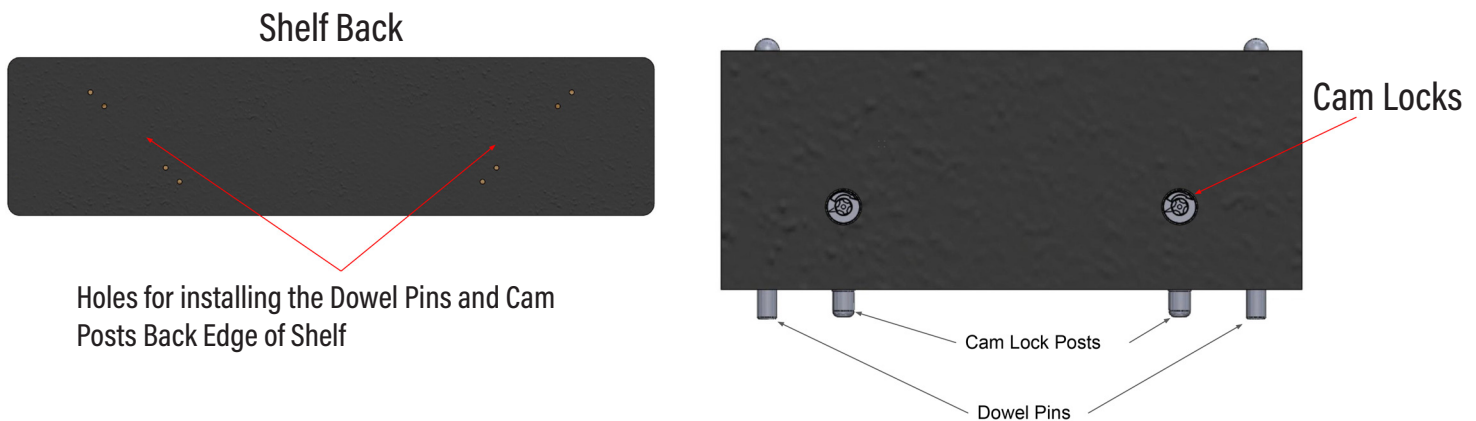


2. Attach the Second Stanchion

Step 1 - Align the Dowel Pins and Cam Posts of one Stanchion with the holes in the bottom of the Shelf. Press the Stanchion down until it is flush with the shelf.

Note - Be sure to orient the black side of the leg to the back side of the shelf.

Step2 - Rotate both Cam Disks using a screwdriver until tight.

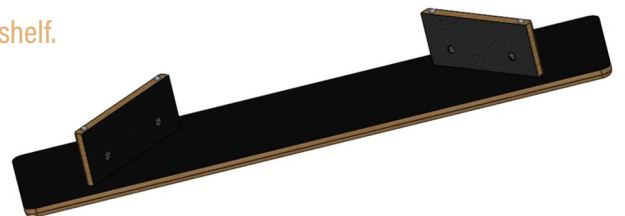

Completed

