


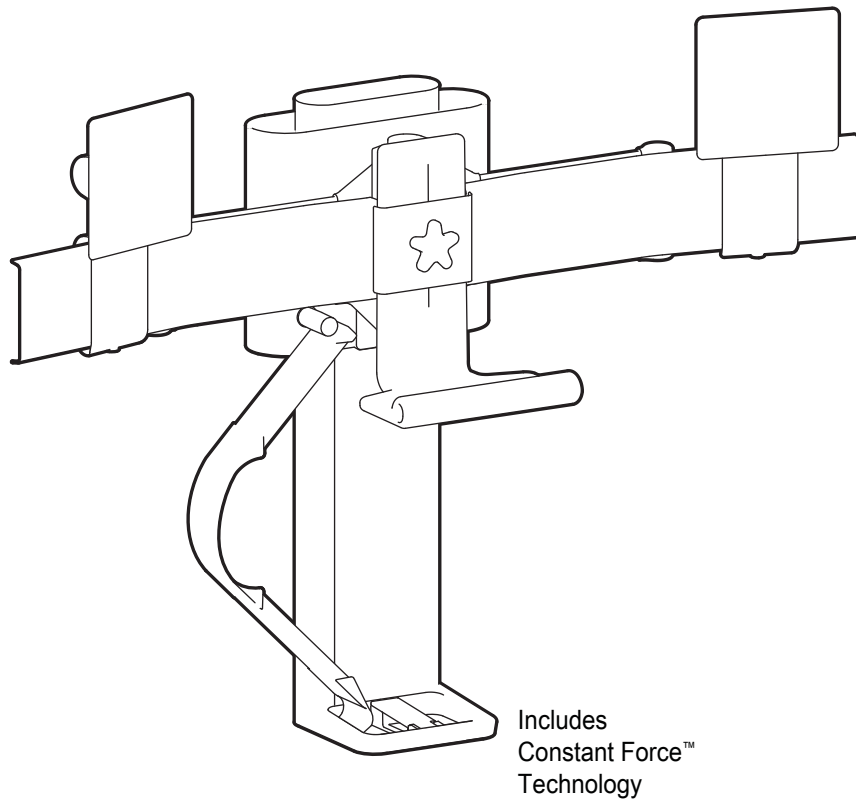

TRACE™

Dual Monitor Mount





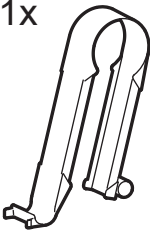

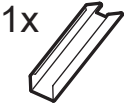
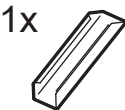
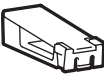



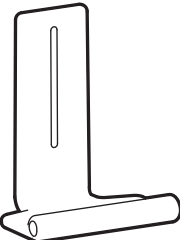
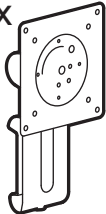

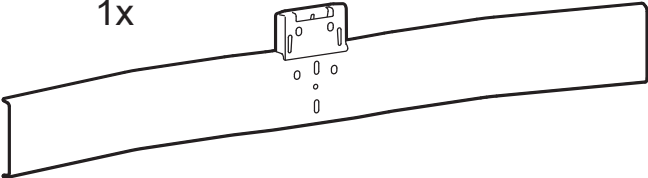







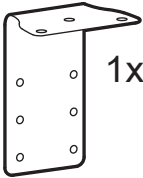
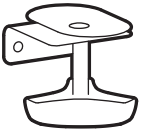
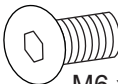
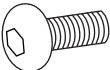


User Guide

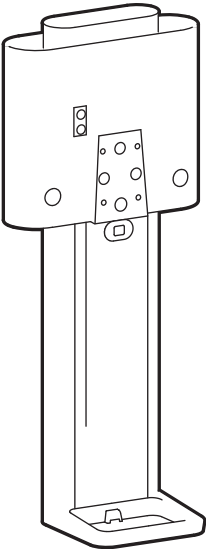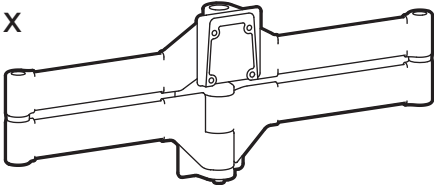
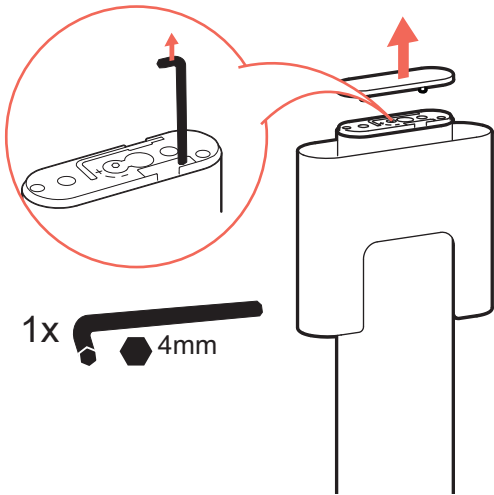


Tools Needed




	A	B	C	D	E	F	
1	<div>1x</div> 	<div>1x</div> 		<div></div> <div>1x  4mm</div>			
2		<div>1x</div> 	<div>4x</div> 				
3		<div>1x</div> 	<div>1x</div> 				
4		<div>1x</div> 	<div>1x</div> <div>M5</div> 	<div>1x</div> 	<div>4x</div> <div>M6 x 8mm</div> 		
5	<div>1x</div> 	<div>2x</div> 	<div>2x</div> 	<div>1x</div> 			
6			<div>2x</div> <div>M4 x 10mm</div> 				
7	<div>1x</div>  <div>2mm</div>	<div>2x</div> 	<div>1x</div> 	<div>1x</div> <div>M6</div> 	<div>4x</div> <div>M6 x 12mm</div> 	<div>8x</div> <div>M4 x 10mm</div> 	
8	<div>1x</div> 	<div>1x</div> 		<div>3x</div> <div>M6 x 12mm</div> 		<div>2x</div> <div>M6 x 12mm</div> 	


1

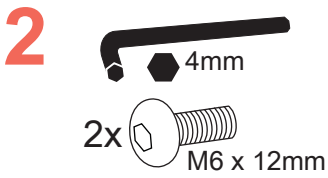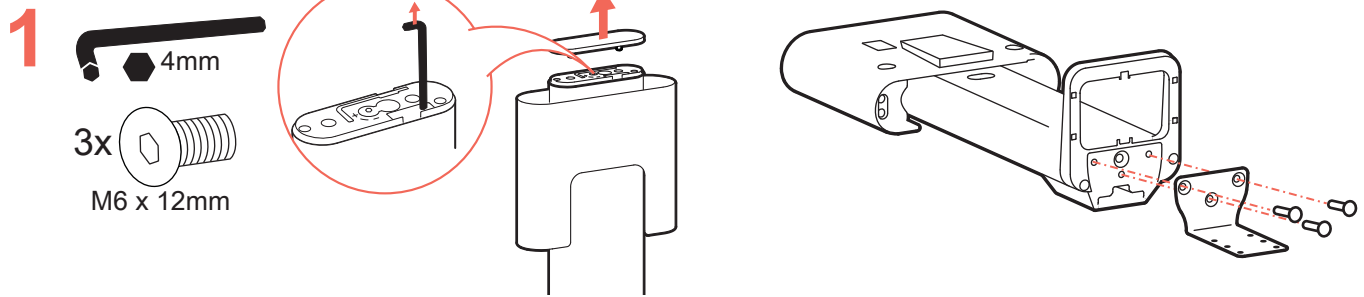


or

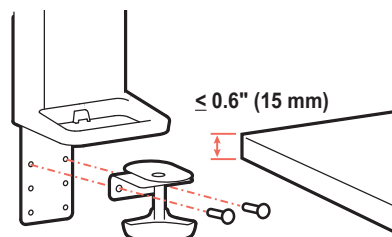

or

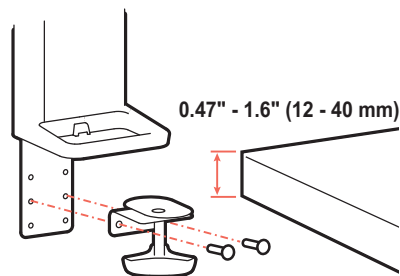


3

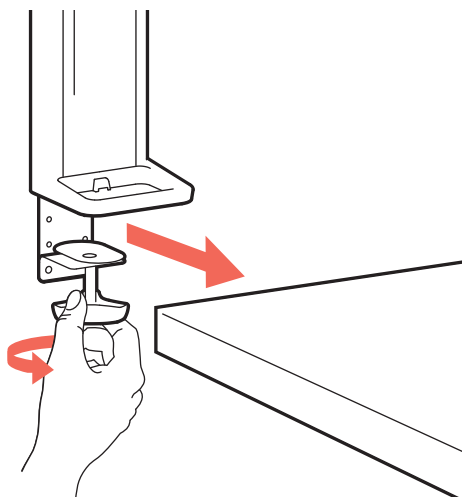


2

1

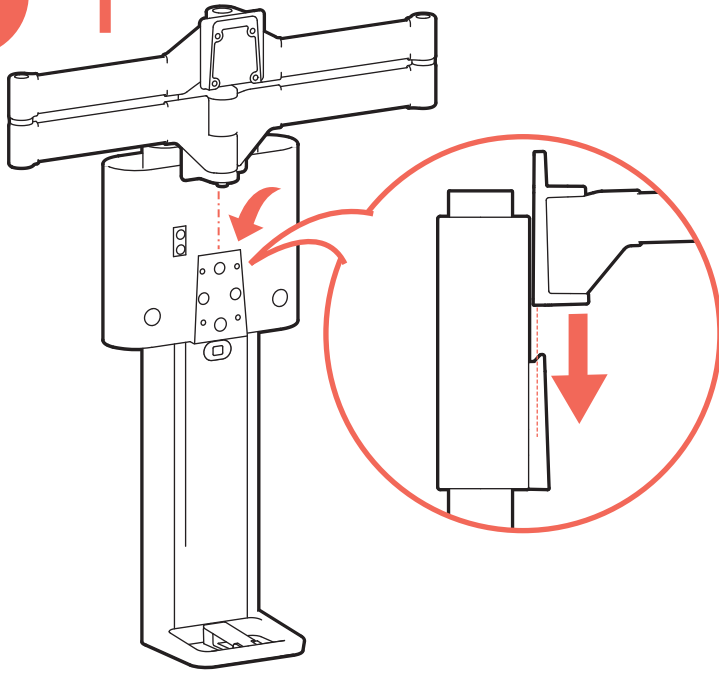

2


4mm 4x M6 x 8mm

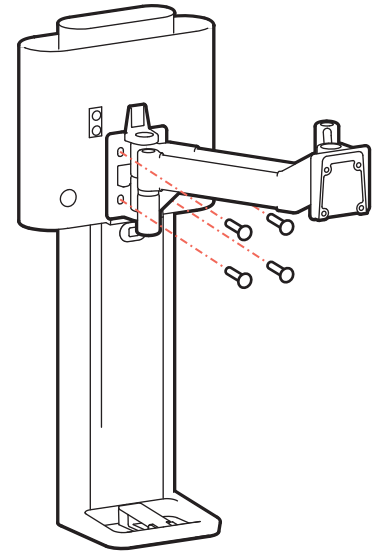

3

4mm

1x




1x




1x




1

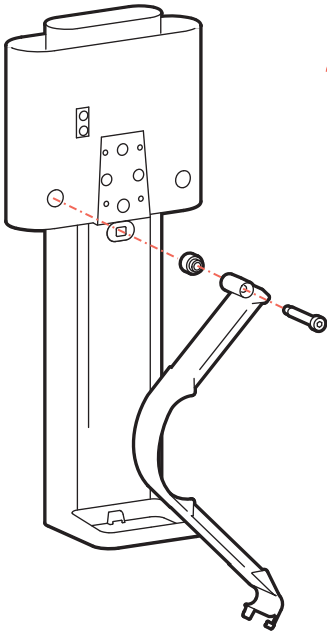


2

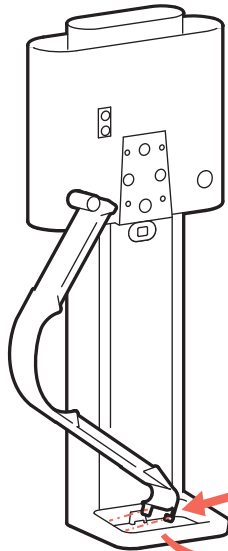



3

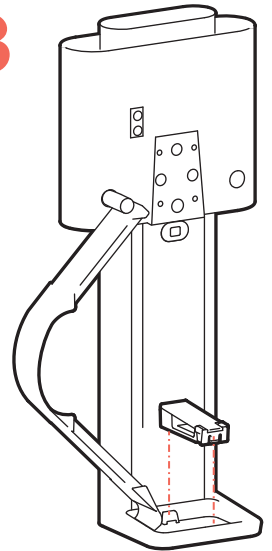

or
1

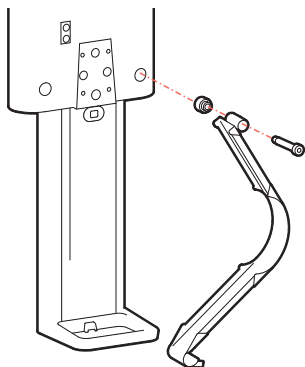


2

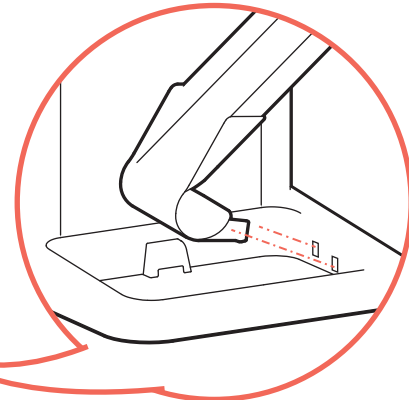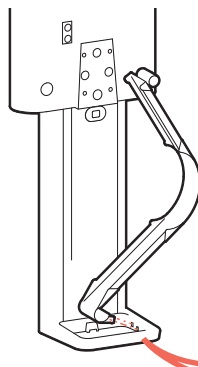


4

1

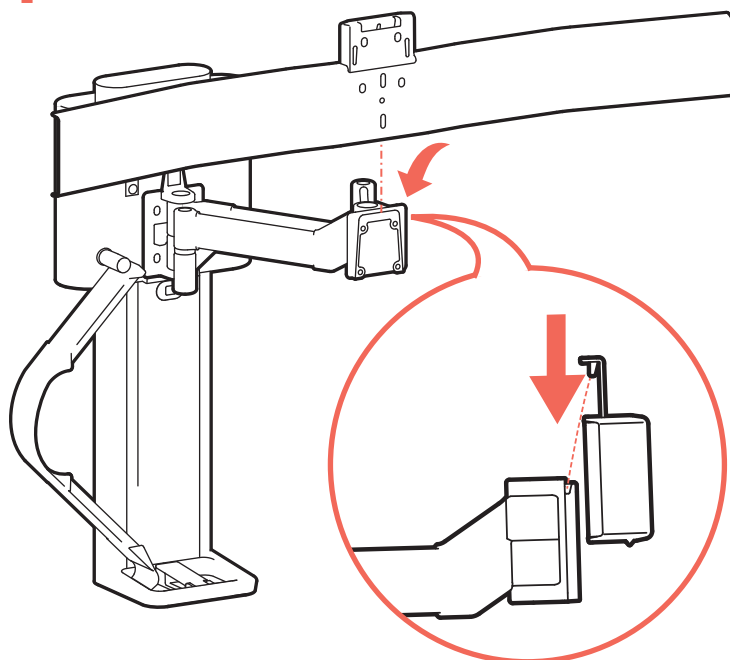


2

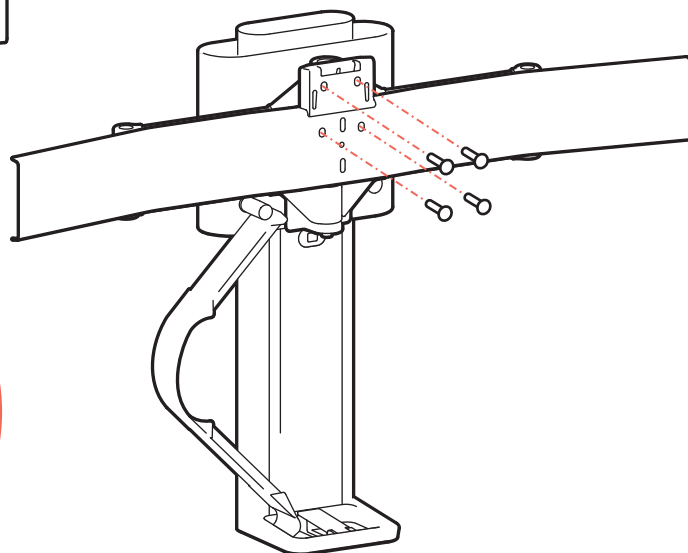


5

1

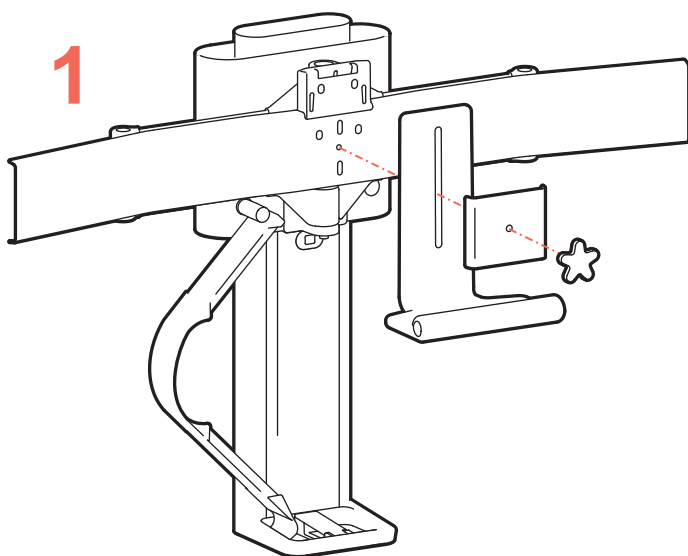



2

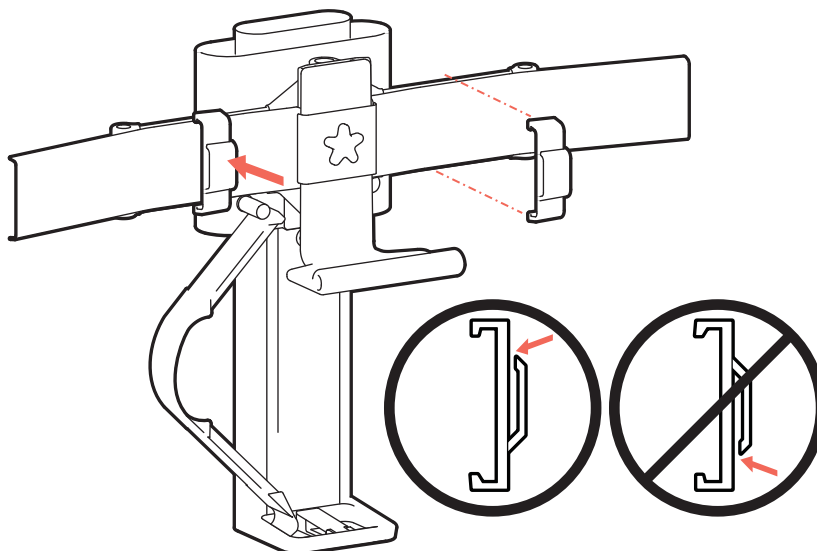




6

1

Rotate – Portrait/Landscape

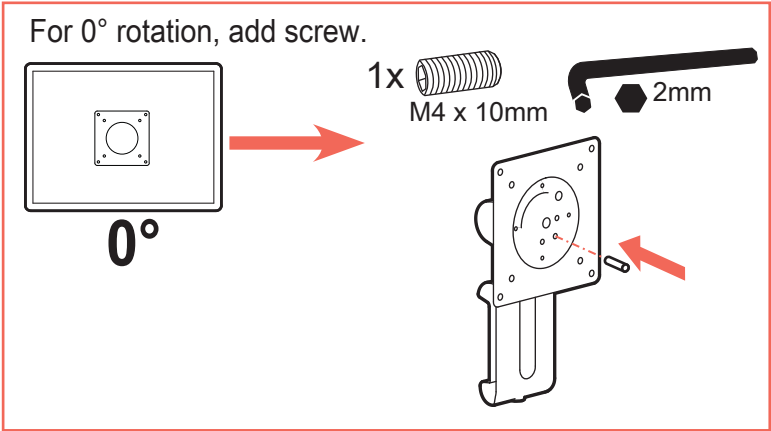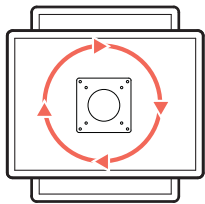


2

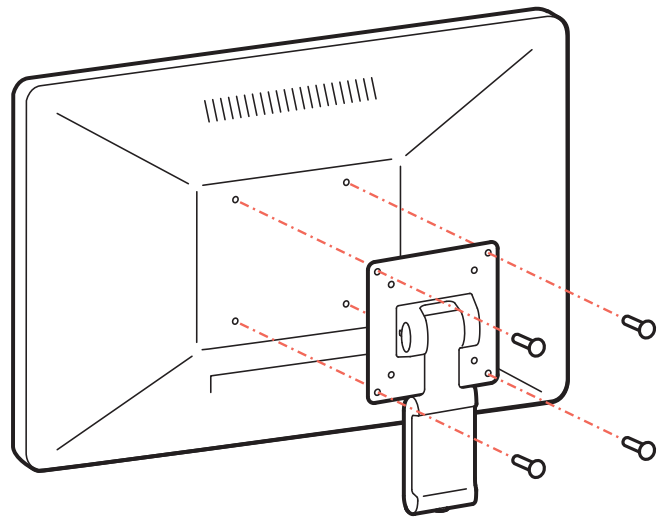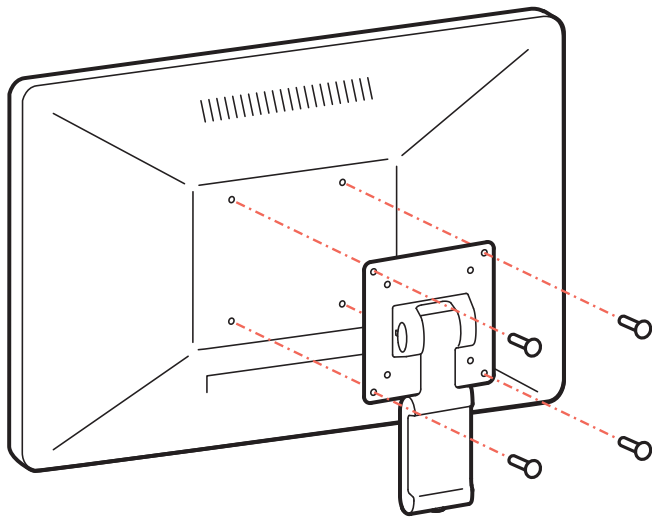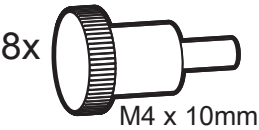


7


1

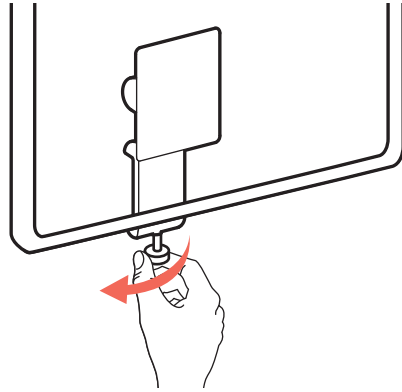

2

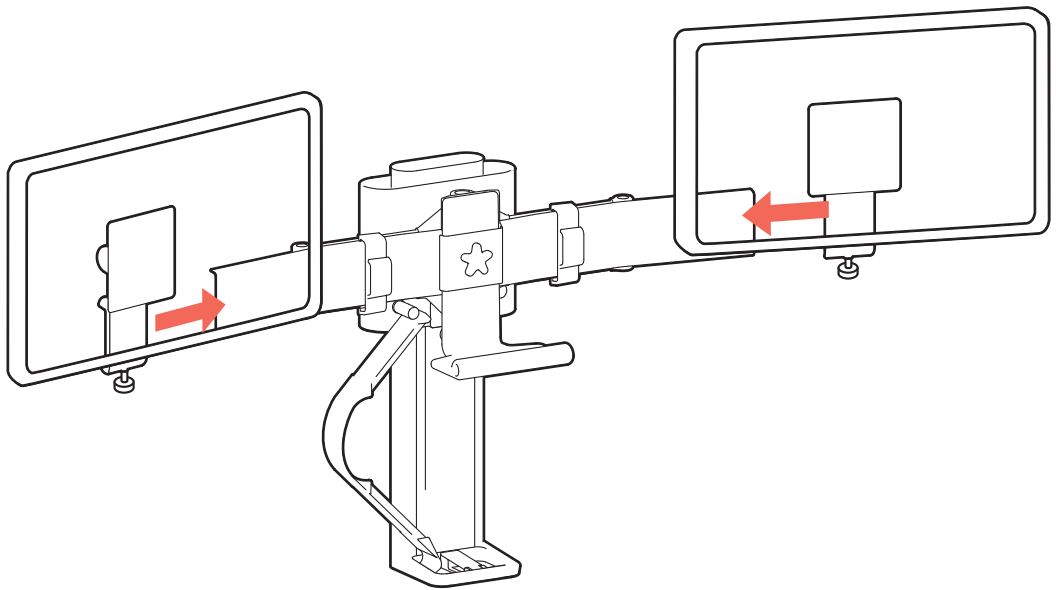

3

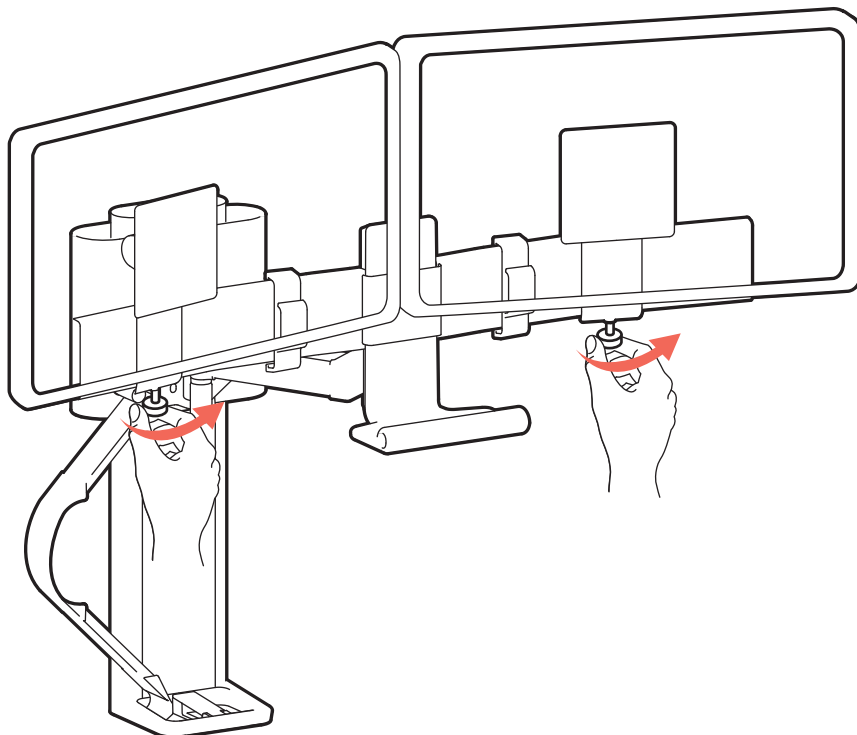




Adjustment Step

Important! You will need to adjust this product after installation is complete. Make sure all your equipment is properly installed on the product before attempting adjustments. This product should move smoothly and easily through the full range of motion and stay where you set it. If movements are too easy or difficult or if product does not stay in desired positions, follow the adjustment instructions to create smooth and easy movements. Depending on your product and the adjustment, it may take many turns to notice a difference. Any time equipment is added or removed from this product, resulting in a change in the weight of the mounted load, you should repeat these adjustment steps to ensure safe and optimum operation.

9

Adjustment Step



Lift – Up and down

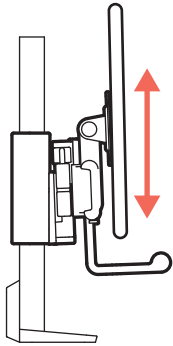

Increase Lift Strength
If the mounted weight is too heavy or this product does not stay up when raised, then you'll need to increase Lift Strength:





Decrease Lift Strength
If the mounted weight is too light or this product does not stay down when lowered, then you'll need to decrease Lift Strength:

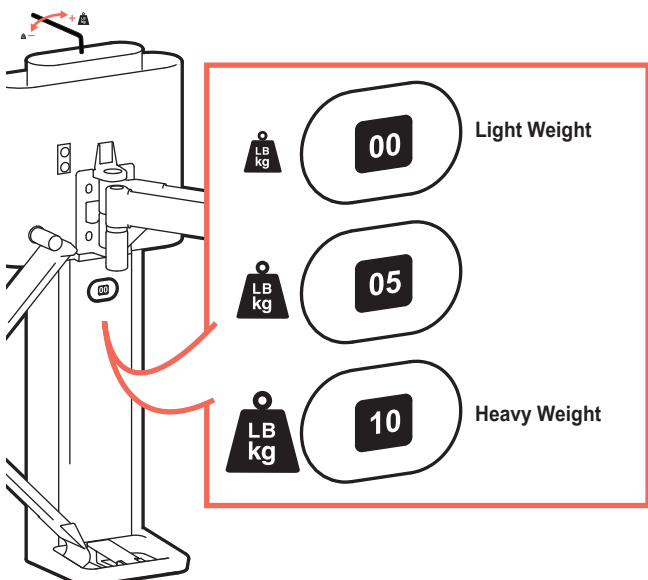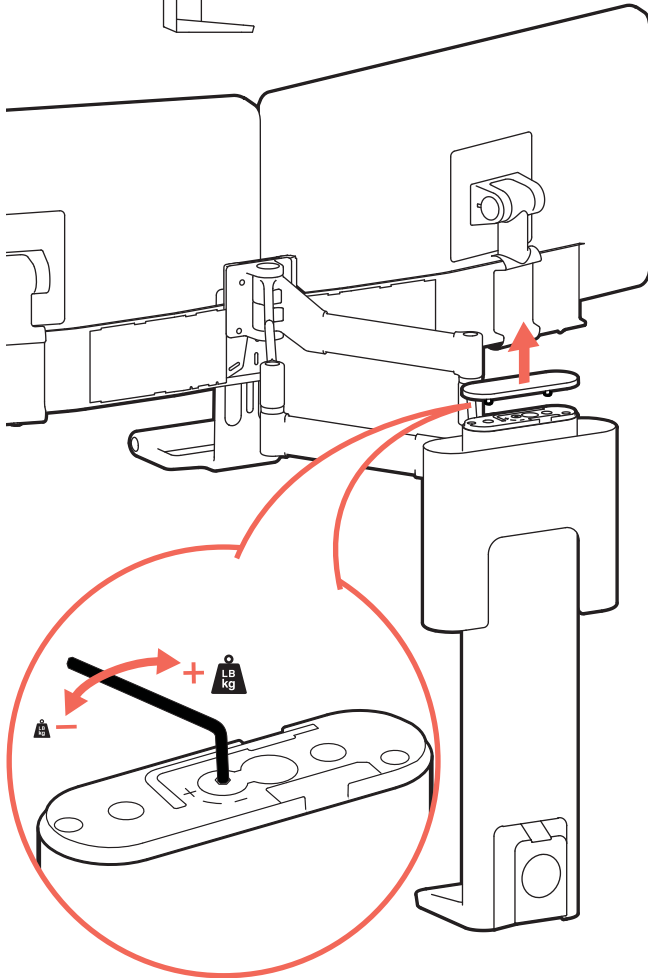

10

Adjustment Step


Tilt – Forward and Backward

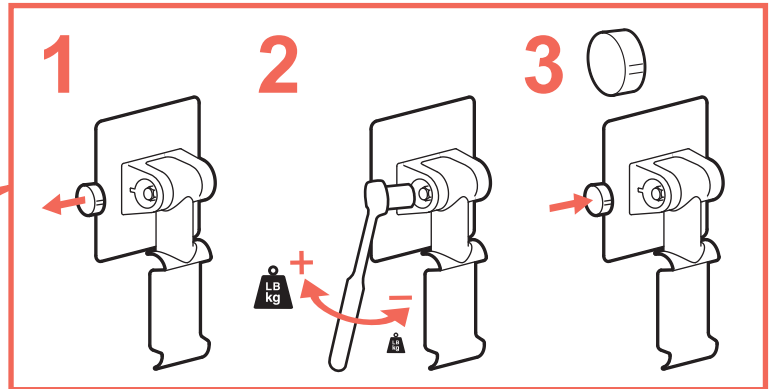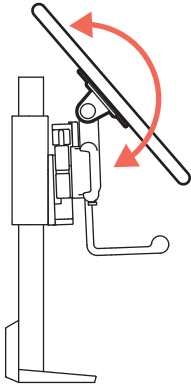


Increase Friction
If this product moves too easily,
then you'll need to increase friction:




Decrease Friction
If this product is too difficult to move,
then you'll need to decrease friction:

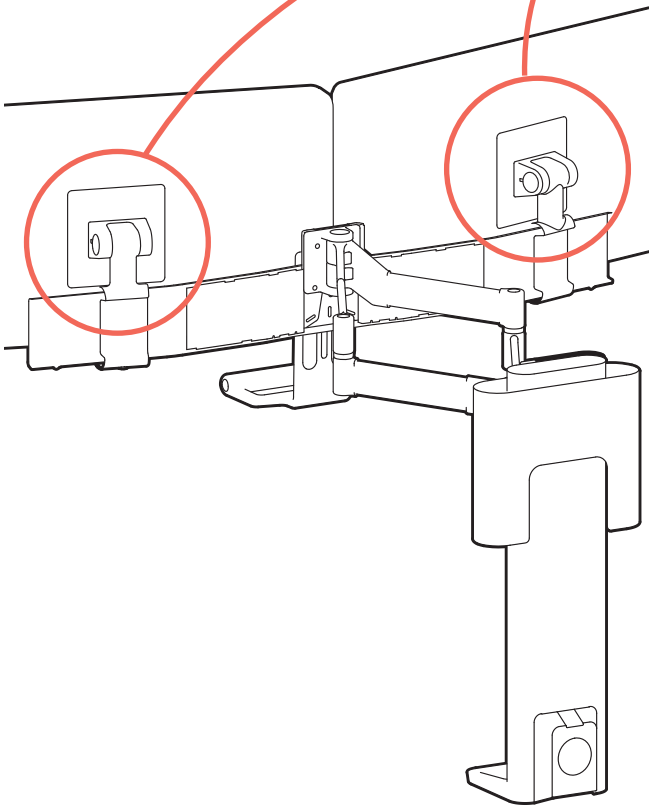


1 Raise to top before cable routing.

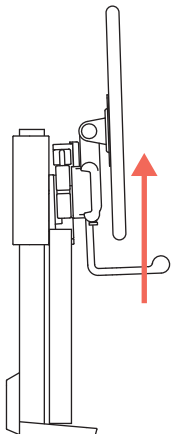


2 Pull out to full extension to allow enough cable slack for full range of motion.

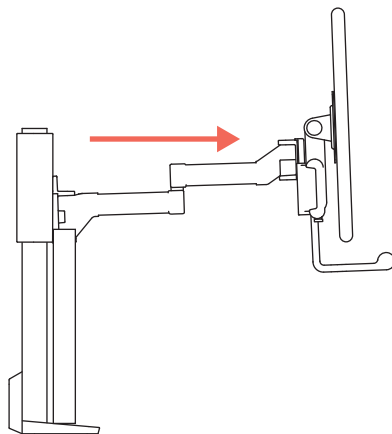


3 Tilt monitors all the way back to allow enough cable slack for full range of motion.

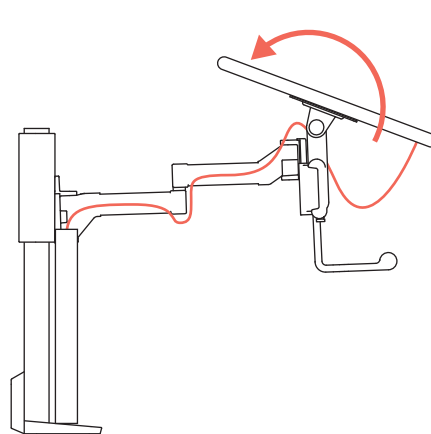

4 With monitors tilted all the way back, plug cables into monitors and route through clips and over cross bar.

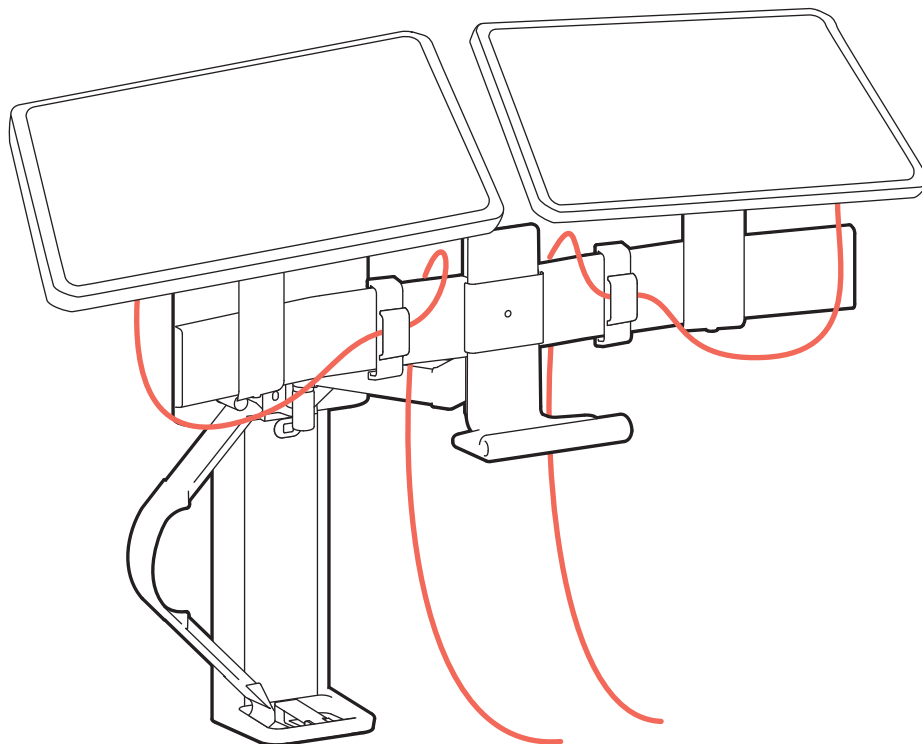


- 5** With monitors tilted all the way back and arms fully extended, push over to side to allow enough cable slack for full range of motion.

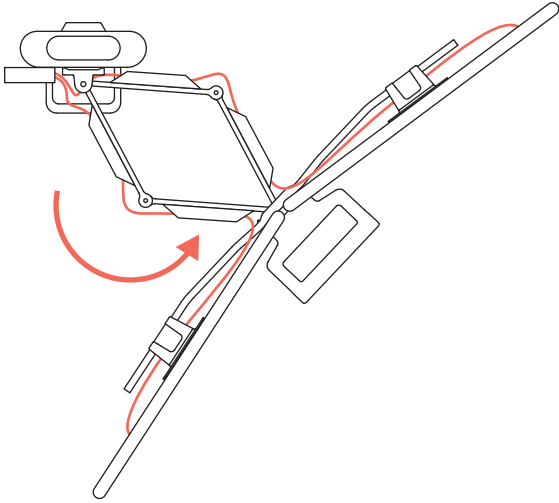

- 6** Route cables and attach cable covers along extension arms.


- 7** Route cables down through cable channel keeping cables flush against cable channel, then secure cables with clip at bottom.

- 8** Attach cable channel covers.

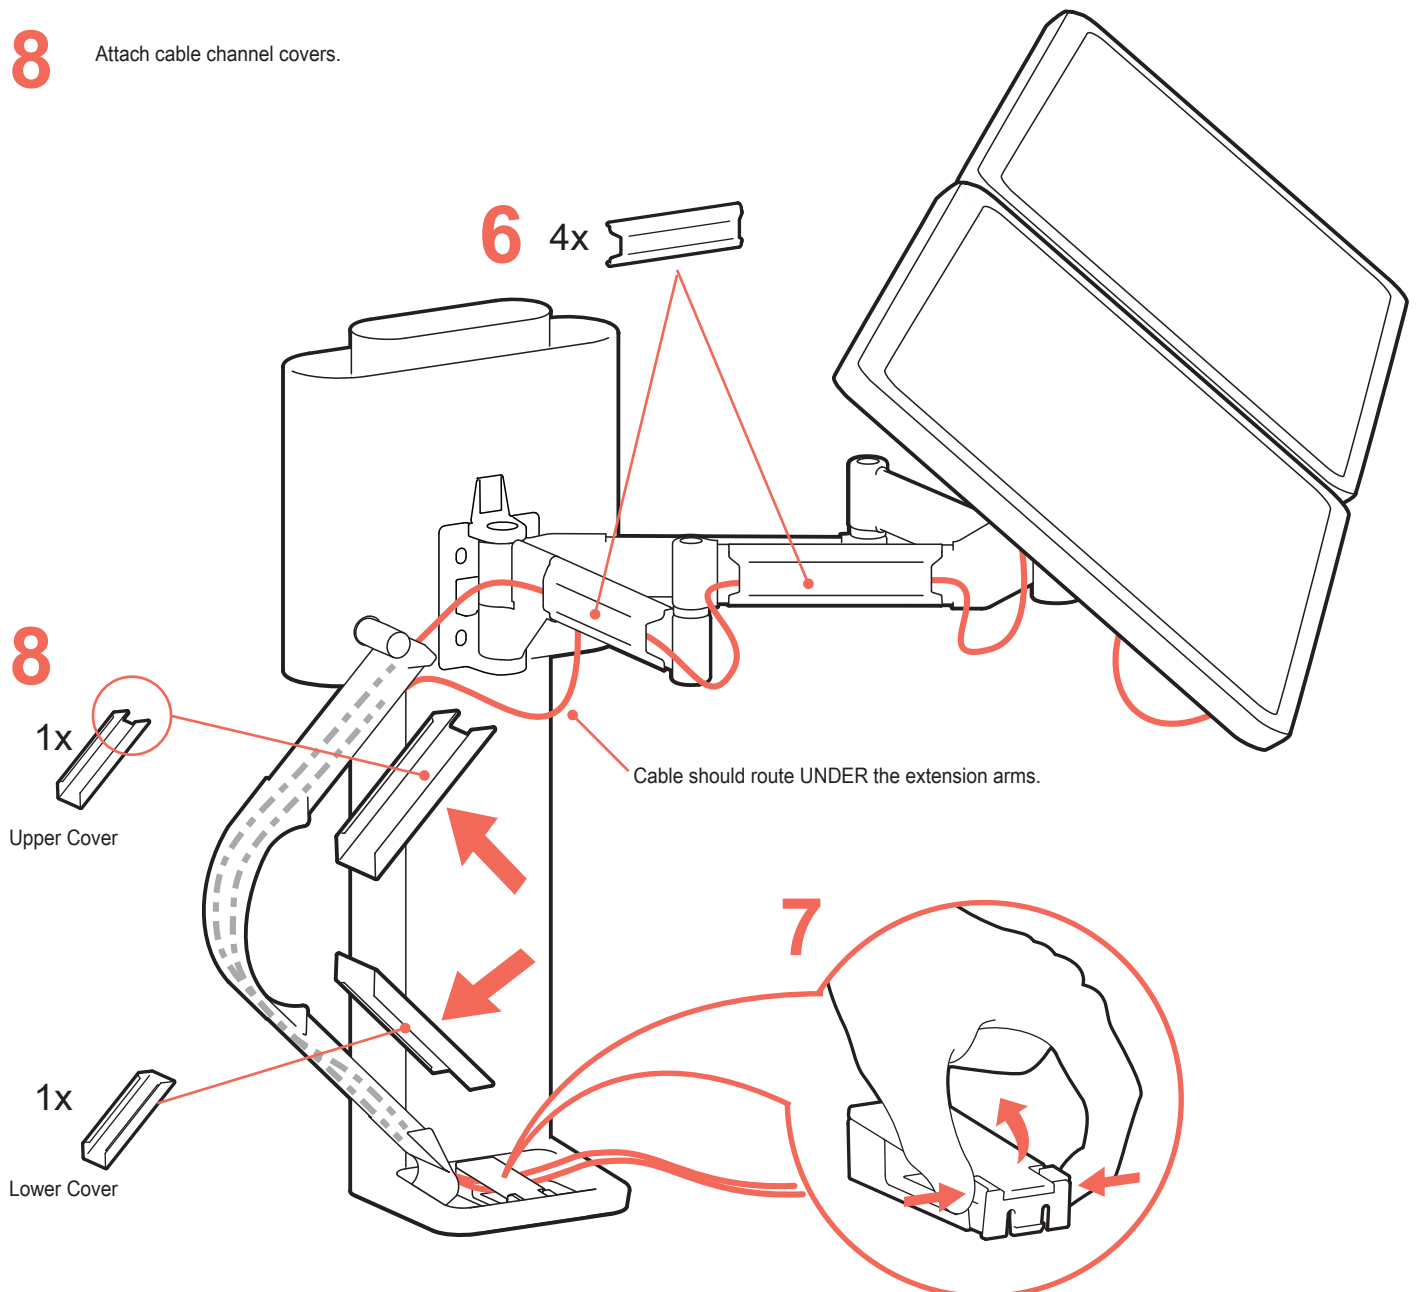

Installation is Complete.

Now your Product is ready for however you work best.

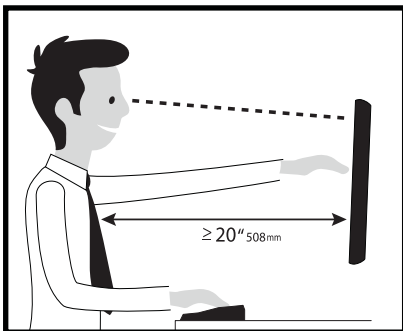


Learn more about ergonomic computer use at:
www.imovr.com/guides/ergonomics

Safety




Warning: Because mounting surface materials can vary widely, it is imperative that you make sure mounting surface is strong enough to handle mounted product and equipment.

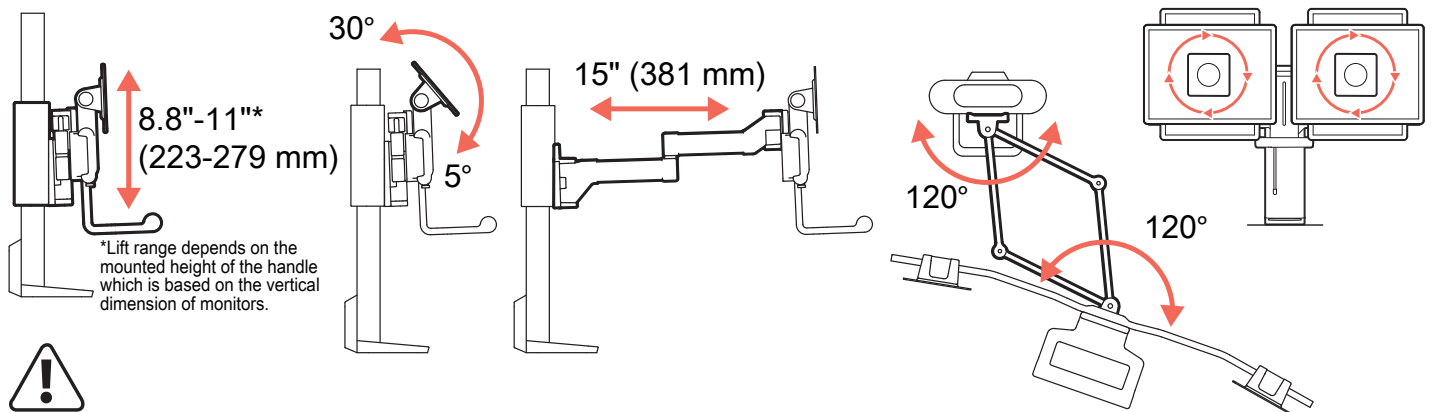

Caution: Leave enough slack in cable to allow full range of motion. To avoid the potential to pinch cables it is important to follow the cable routing instructions in this manual. Failure to follow these instructions may result in equipment damage or personal injury.

Safety

Weight Capacity:

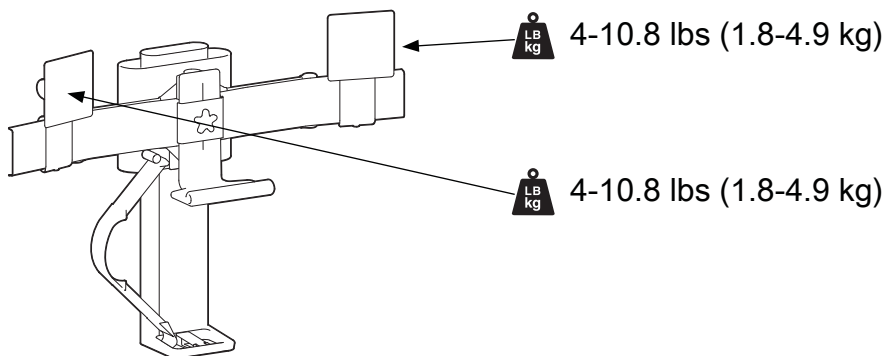

CAUTION: DO NOT EXCEED MAXIMUM LISTED WEIGHT CAPACITY. SERIOUS INJURY OR PROPERTY DAMAGE MAY OCCUR!



WARNING Avertissement


Impact Hazard! Moving Parts can Crush and Cut. Move Arm to highest position before removing equipment or serious personal injury and/or equipment damage may occur. Minimize Lift Tension BEFORE Recycling or Dismantling.

Danger d'impact ! Les parties en mouvement peuvent écraser et couper. Déplacez le bras-support vers la position la plus haute avant d'enlever l'écran ou l'appareil informatique, afin d'éviter des blessures graves et / ou des dommages matériels. Minimisez la tension d'élévation AVANT: Recyclage ou Démantèlement.

www.ergotron.com 829-872




WARNING: Impact Hazard! Moving Parts can Crush and Cut. Move Arm to highest position before removing equipment or serious personal injury and/or equipment damage may occur. Minimize Lift Tension BEFORE Recycling or Dismantling.

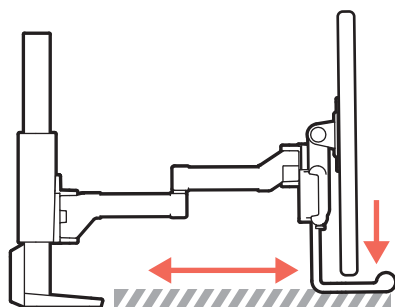

Handle lowers to desk, keep area under handle clear of hands and objects.

For Warranty visit: customer care@iMovR.com
For Service visit: customer care@iMovR.com
For local customer care, our Toll-Free number is (888) 208-6770

NOTE: When contacting customer service, reference the serial number.

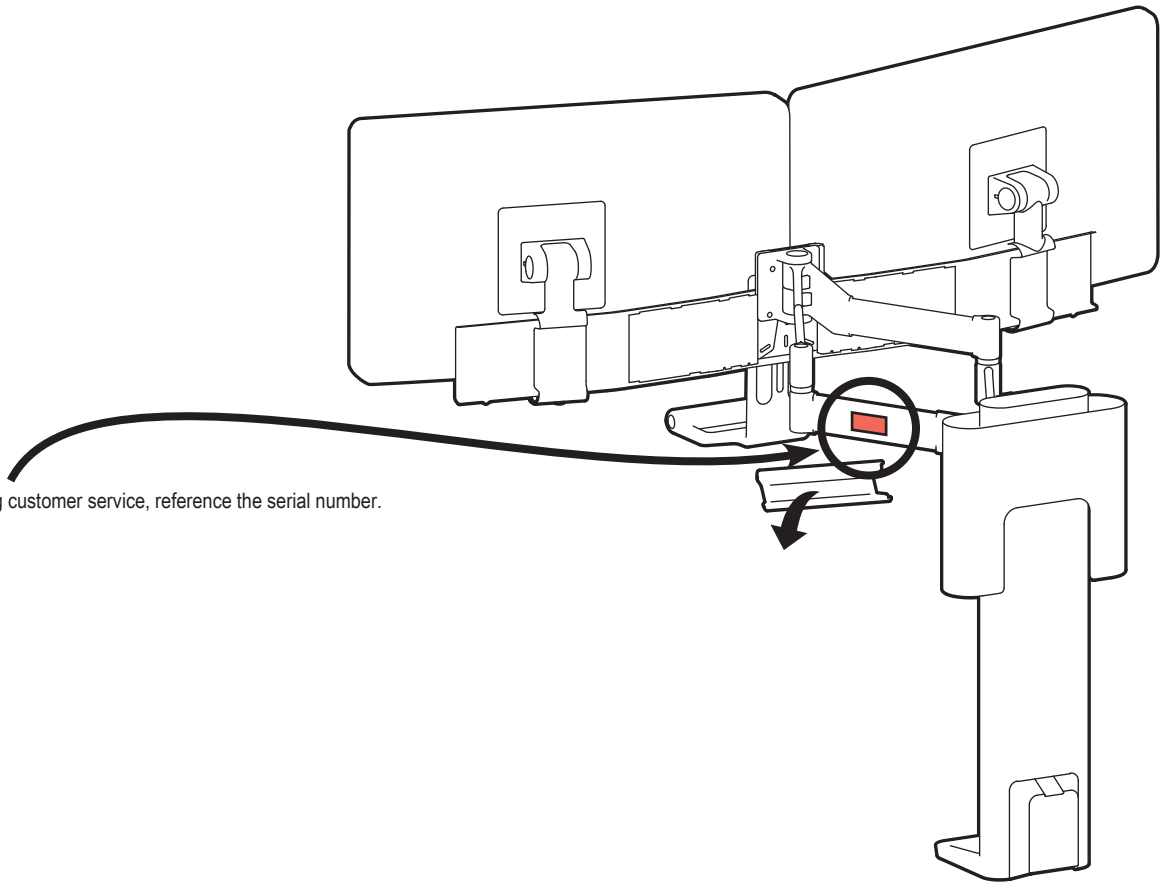

iMovR

14110 NE 21st Street
Bellevue, WA 98007
(888) 208-67 (425) 999-3550